

Underground-Electrical Only

TRENCH DEPTH

- A. 900 mm (36") Under Driveway.
- B. 600 mm (24") Not Under Driveway

Ground Surface

TRENCH DEPTH

A B


50% of
BACK
FILL

Caution
Tape

50% of
BACK
FILL

3" SAND

3" SAND

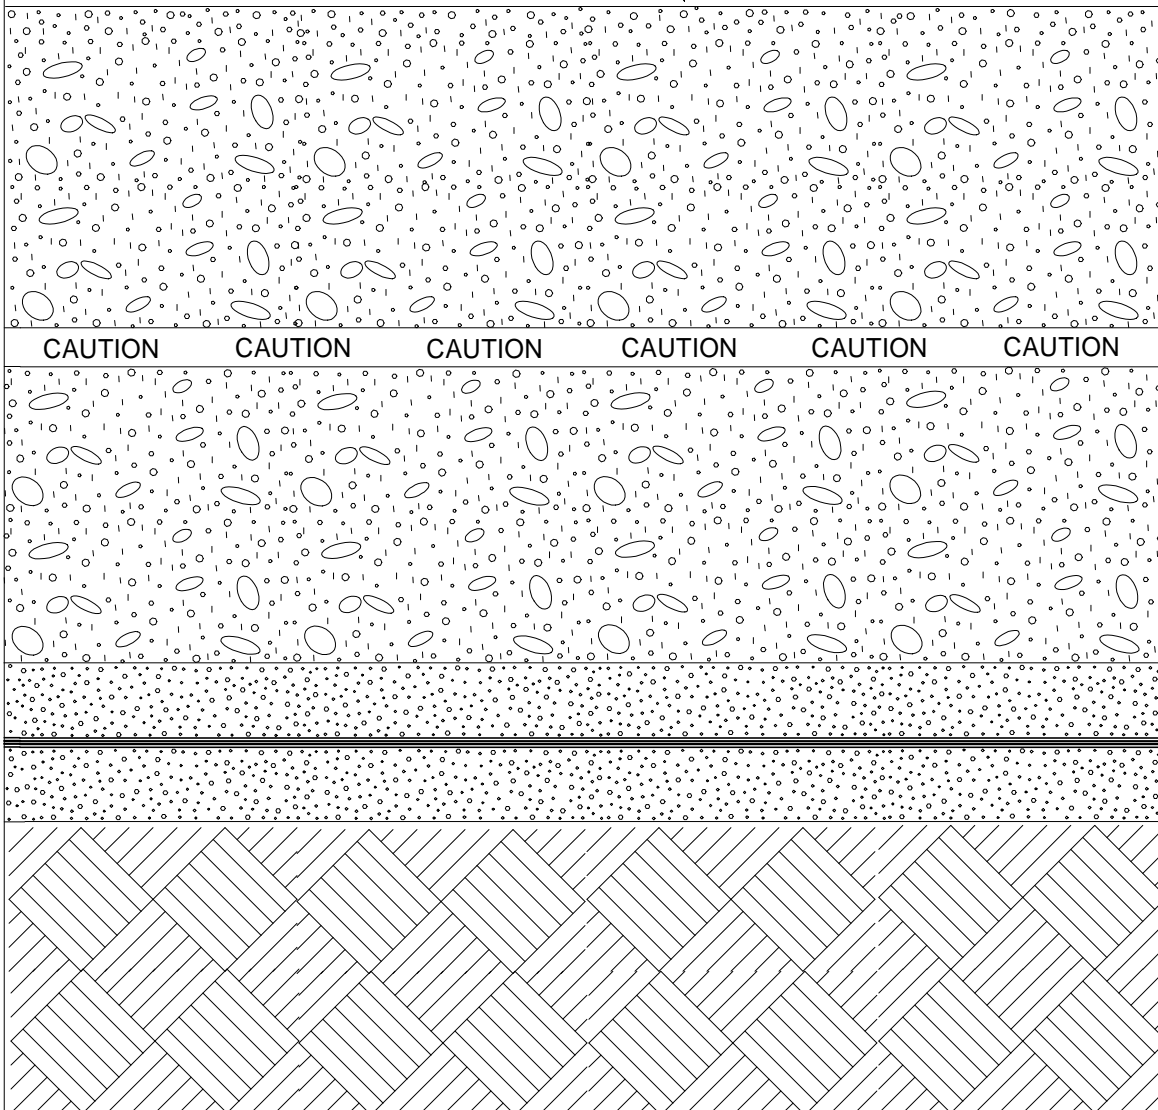

CABLE

Un-Disturbed
Soil

Lay cable with 75 mm (3") of sand below and above cable, back fill trench approx 50%, then lay yellow or red caution/danger tape, then complete back fill to surface.

NOTE: If underground cable is Teck Cable or Conduit, then sand is not required and trench depth can be reduced by 150 mm (6") of above listed depths.