



PLUMBING A KITCHEN SINK

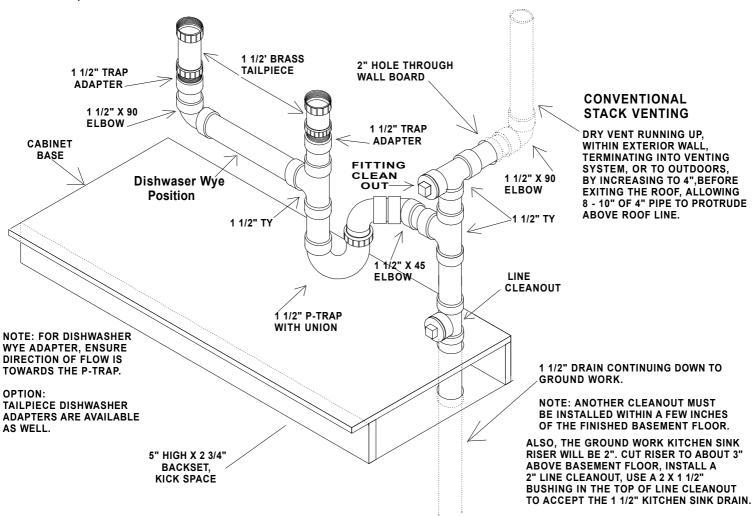

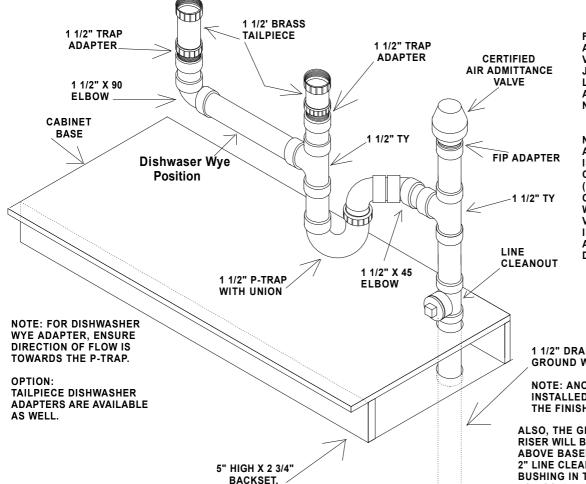

KICK SPACE

ISLAND VENTING

FOR ISLAND SINK VENTING, USE AN APPROVED AIR ADMITTANCE VALVE, AS SHOWN. INSTALL IT JUST BELOW THE COUNTERTOP, LEAVING ENOUGH SPACE TO BE ABLE TO REPLACE IT, IF THE NEED ARISES.

NOTE: AIR ADMITTANCE VALVES, ARE ONLY TO BE USED FOR ISLAND VENTING ONLY, IN NEW CONSTRUCTION.
(THEY MAY BE USED FOR VENTING OTHER DRAINS IN RENOVATIONS, WHERE RUNNING CONVENTIONAL VENT LINES WOULD BE EITHER IMPOSSIBLE OR IMPRACTICAL AND IS AT YOUR INSPECTOR'S DISCRETION).

1 1/2" DRAIN CONTINUING DOWN TO GROUND WORK.

NOTE: ANOTHER CLEANOUT MUST BE INSTALLED WITHIN A FEW INCHES OF THE FINISHED BASEMENT FLOOR.

ALSO, THE GROUND WORK KITCHEN SINK RISER WILL BE 2". CUT RISER TO ABOUT 3" ABOVE BASEMENT FLOOR, INSTALL A 2" LINE CLEANOUT, USE A 2 X 1 1/2" BUSHING IN THE TOP OF LINE CLEANOUT TO ACCEPT THE 1 1/2" KITCHEN SINK DRAIN.